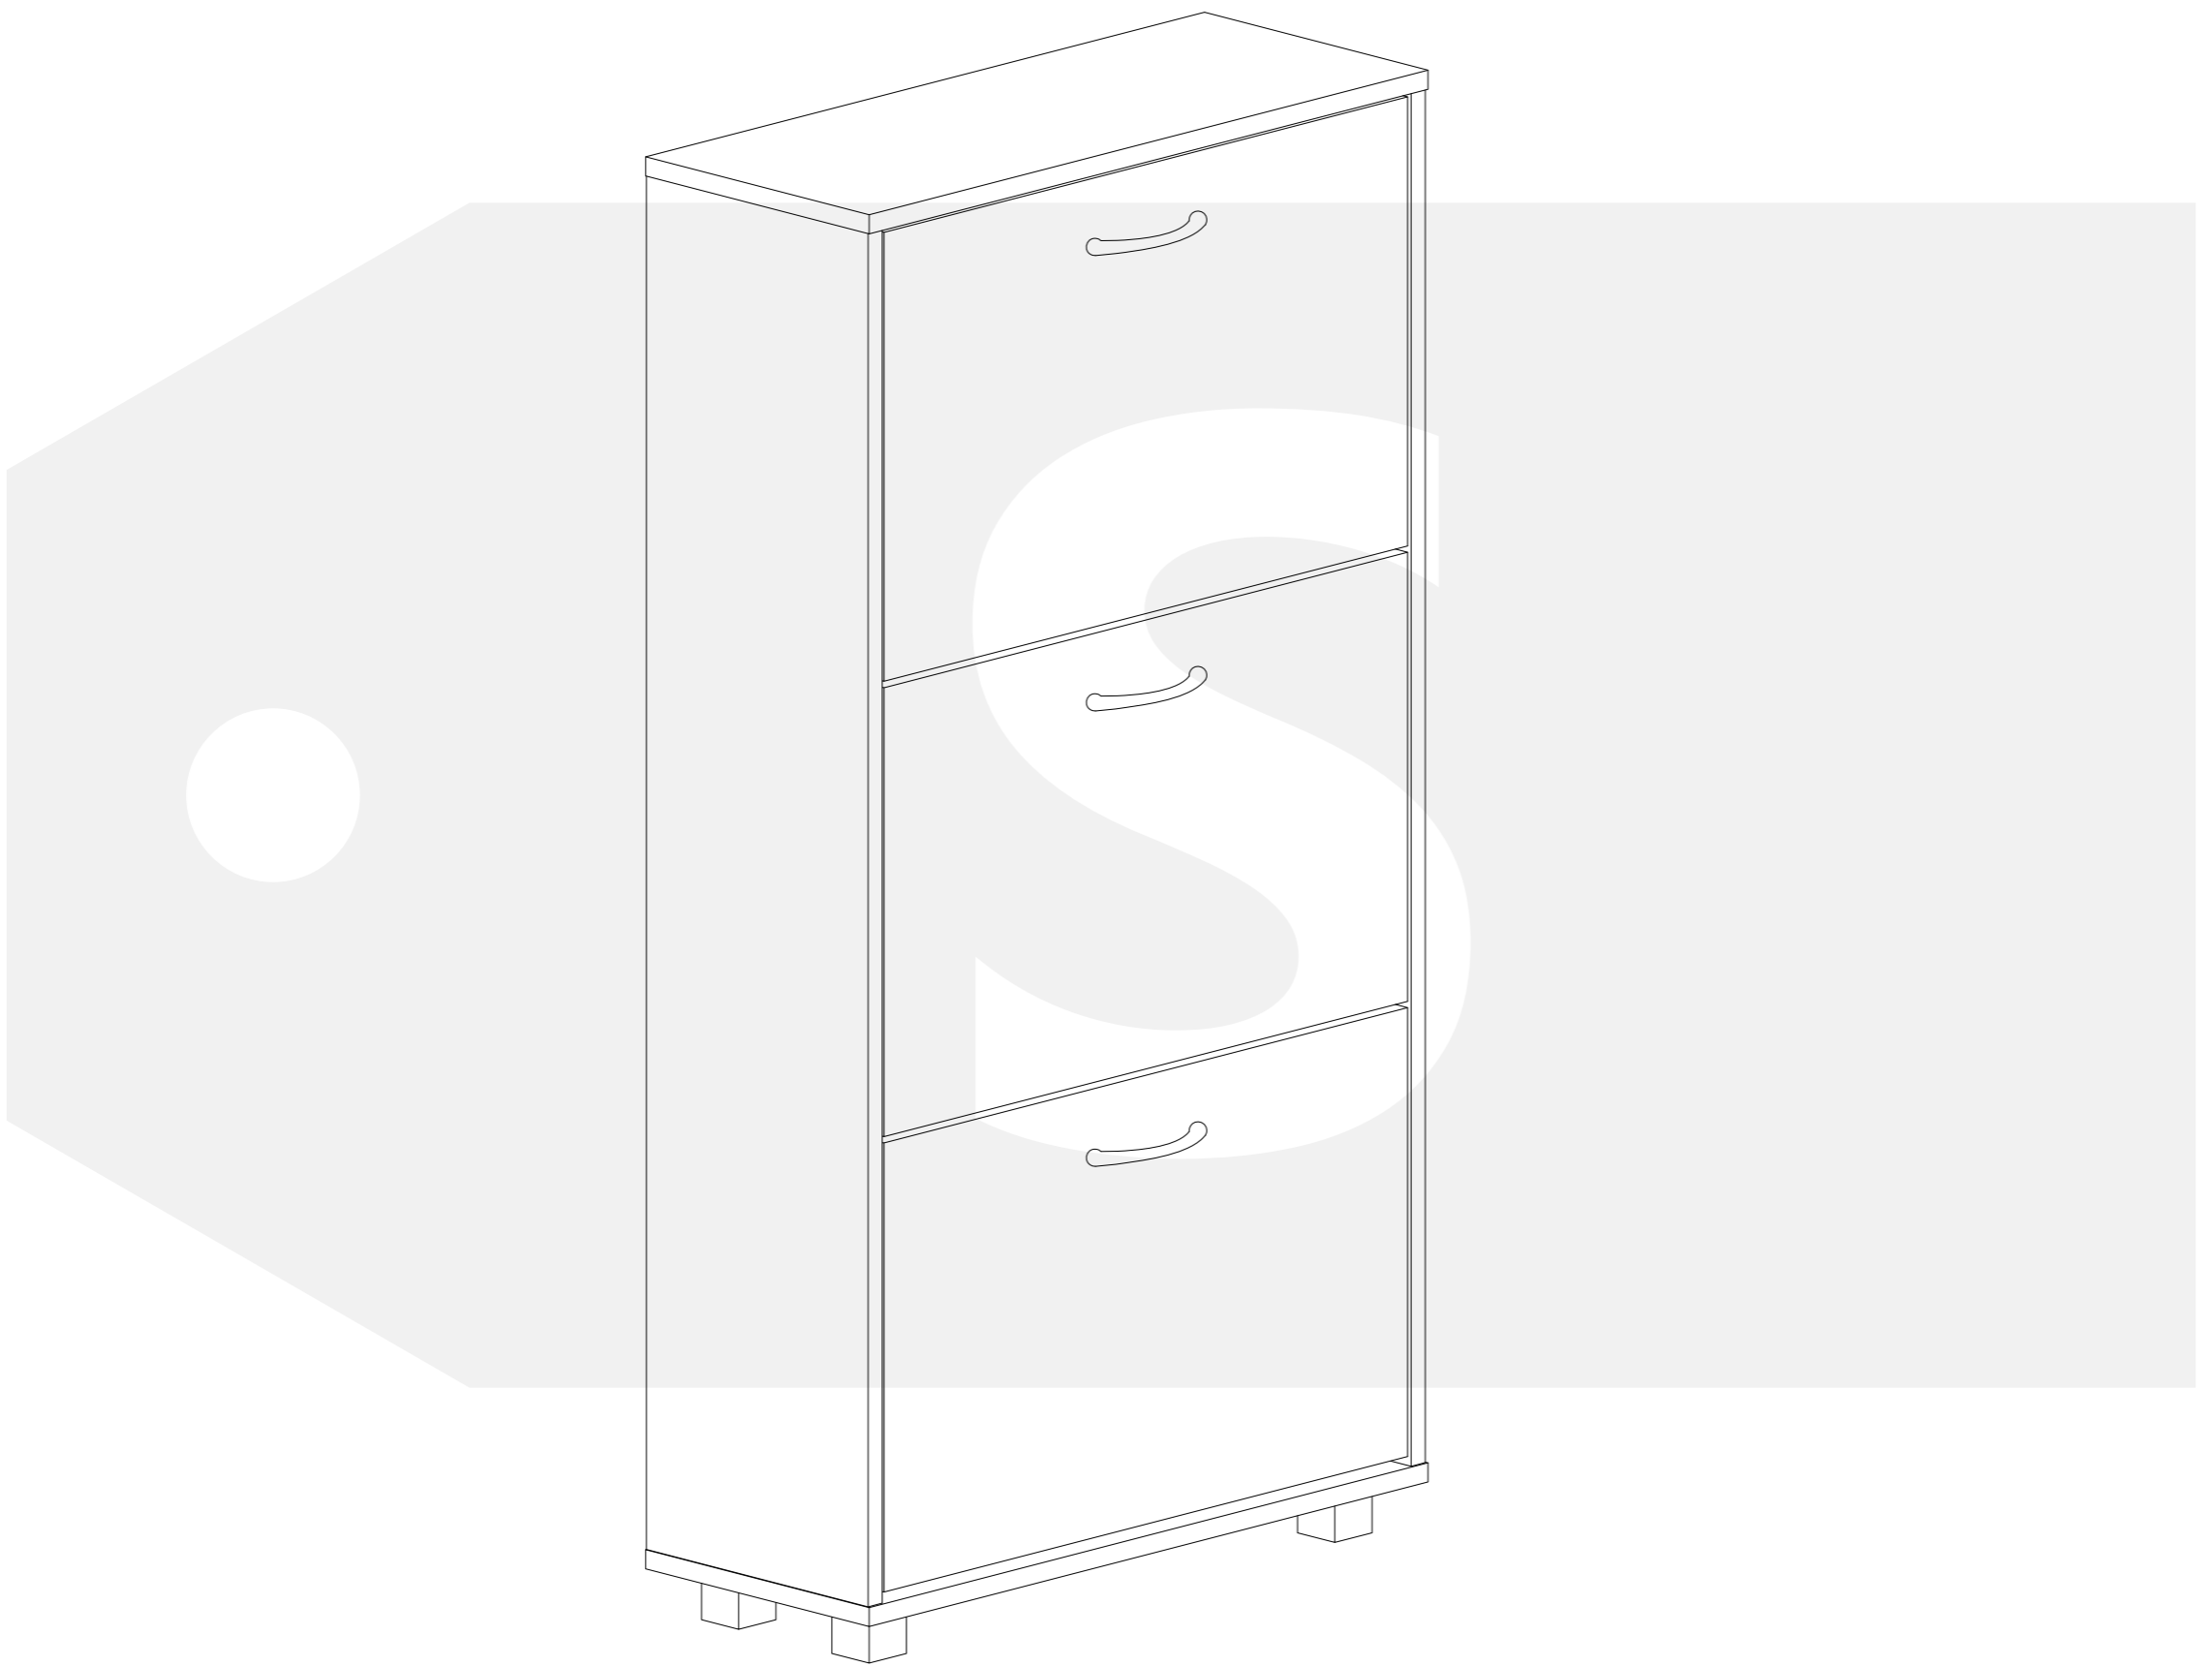


# INSTRUCCIONES

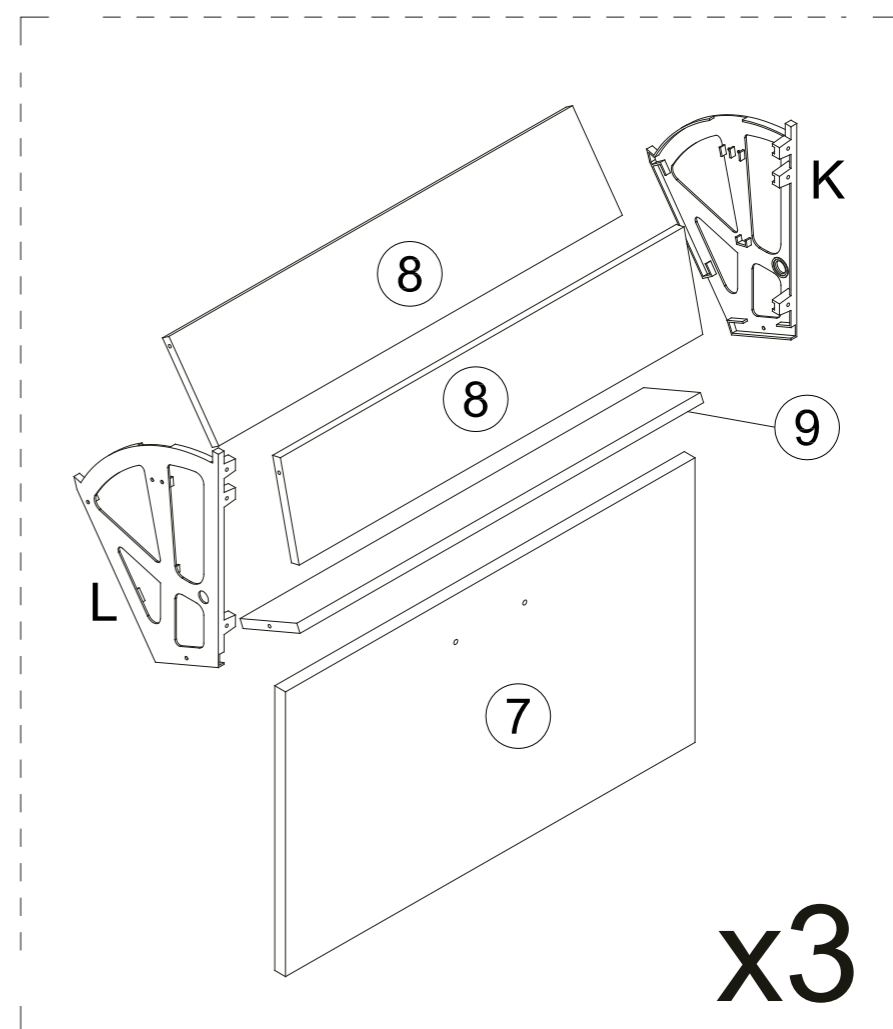
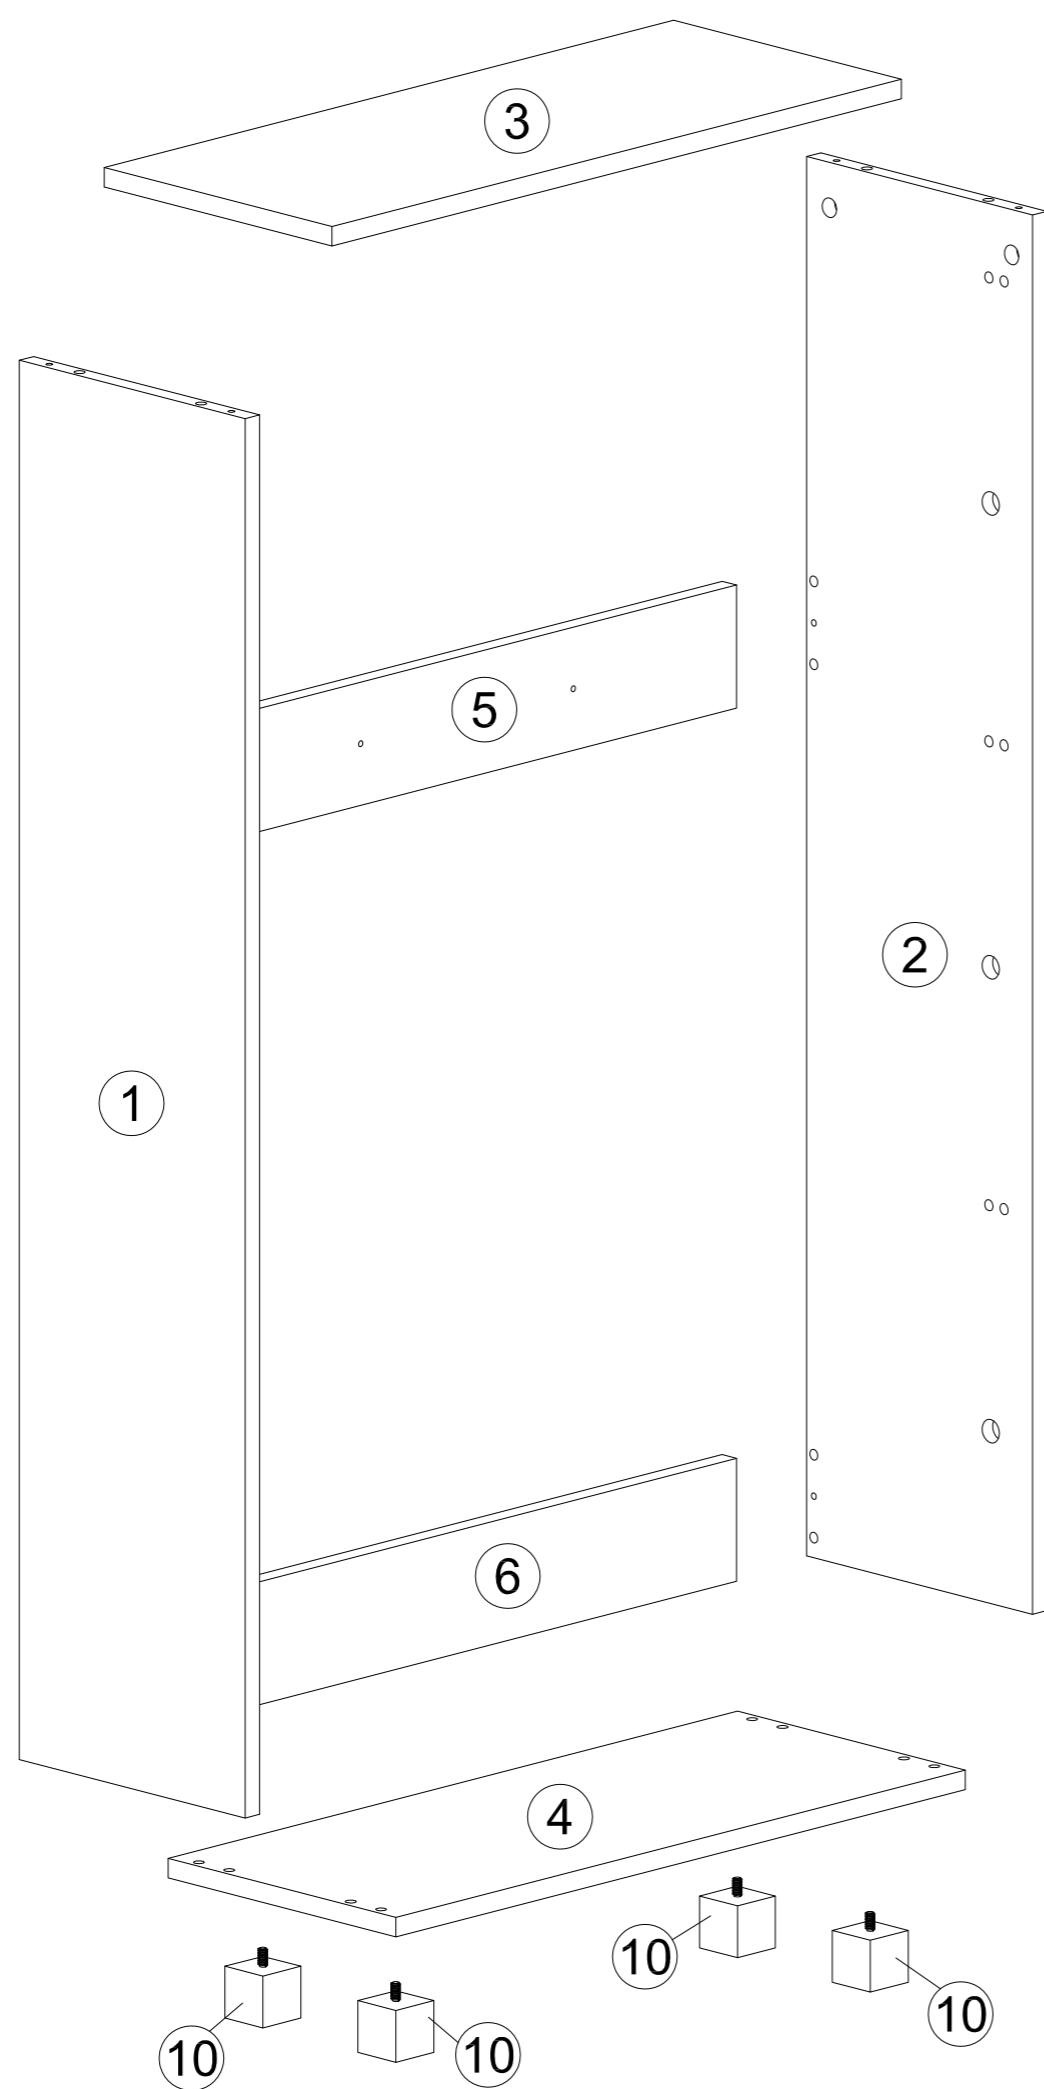
## Zapatero 3 Cajones Holty


















[www.soloproductos.com](http://www.soloproductos.com)

Ctra. de Córdoba, km. 432 Pol. Ind. La Vega, Naves 1, 18230 Atarfe (Granada)

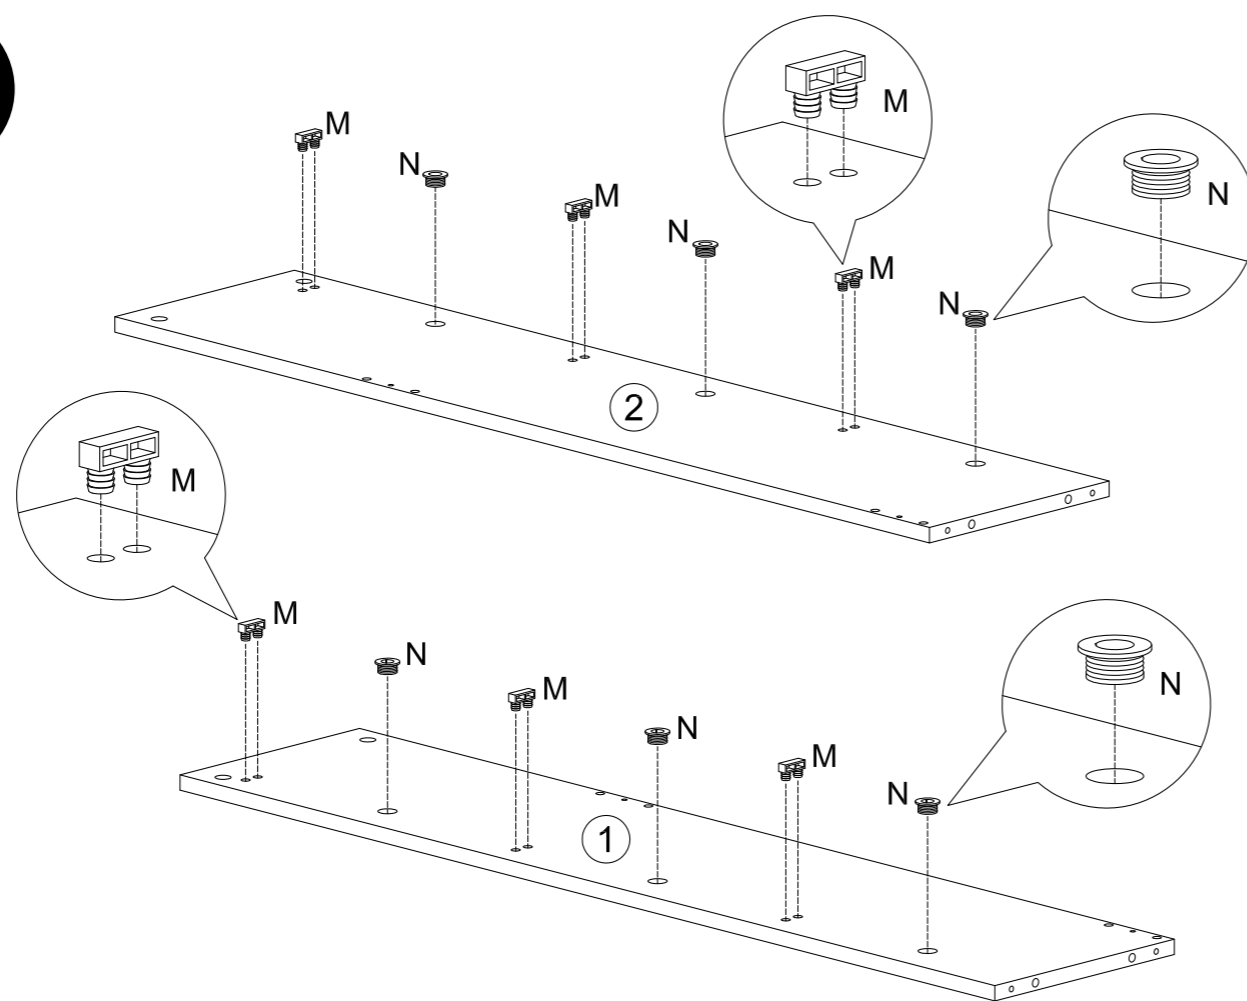
# Zapatero 3 Cajones Holty





A	x8	B	x8	C	x16	D	x36	E	x3	F	x2	G	x6	H	x4
															
M6*35mm		Ø15mm		Ø8*30mm		Ø3.5*14mm				Ø4*35mm		Ø4*12mm		7*48mm	
J	x1	K	x3	L	x3	M	x6	N	x6	P	x6	Q	x2		
															
M4															

# Zapatero 3 Cajones Holty

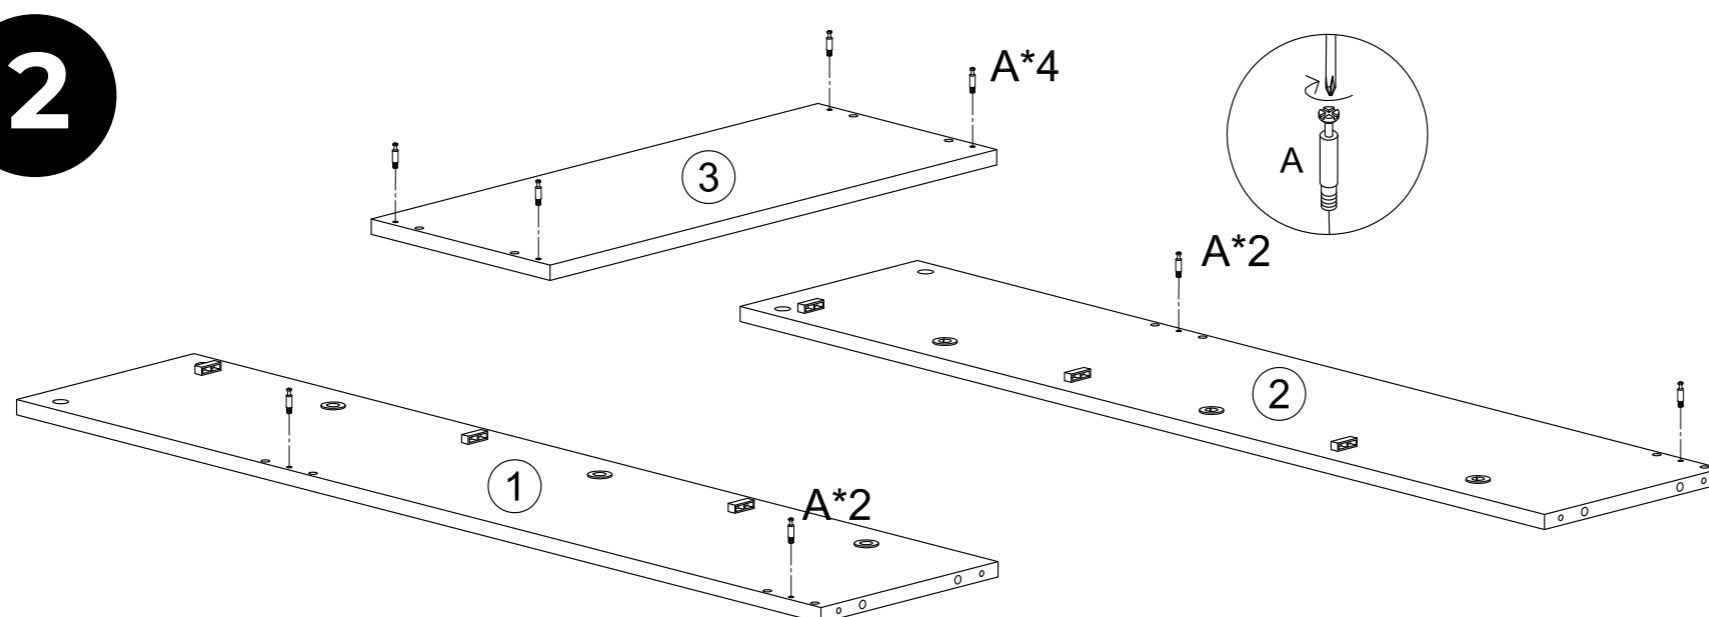
**1**




M	x6
	

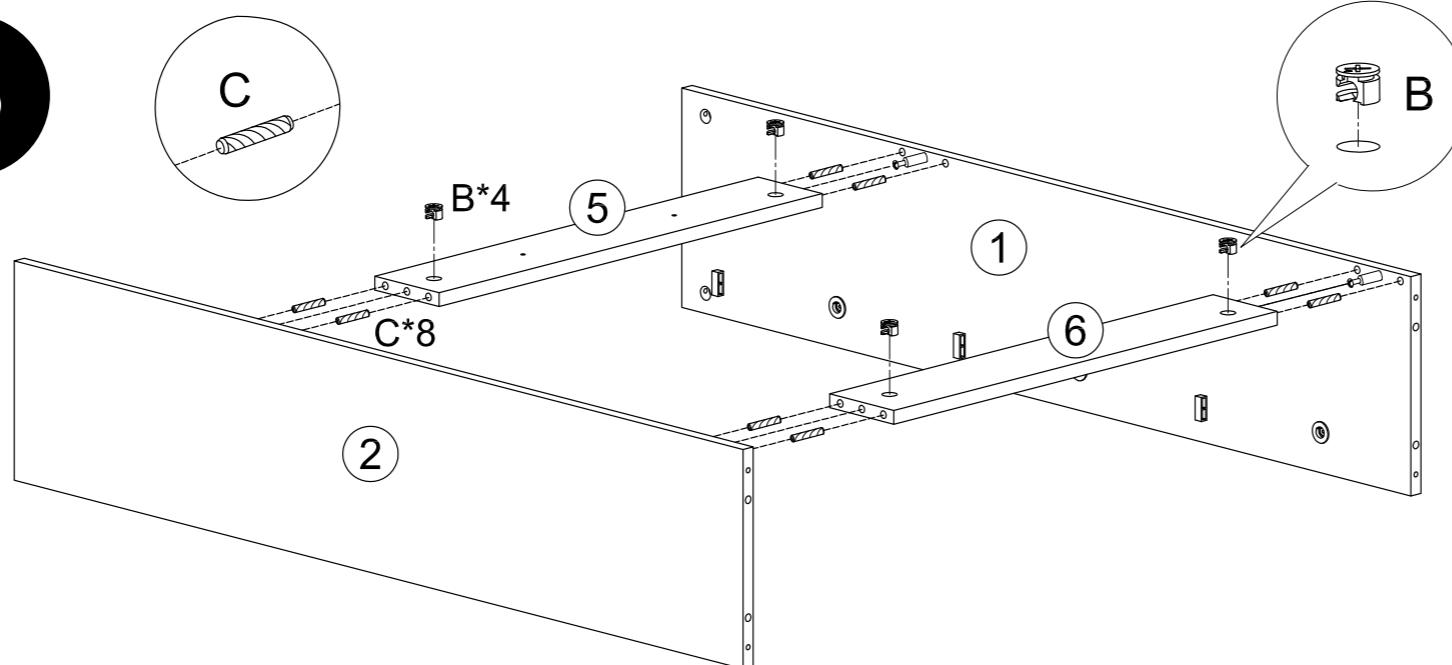
N	x6
	


**2**




A	x8
	
M6*35mm	

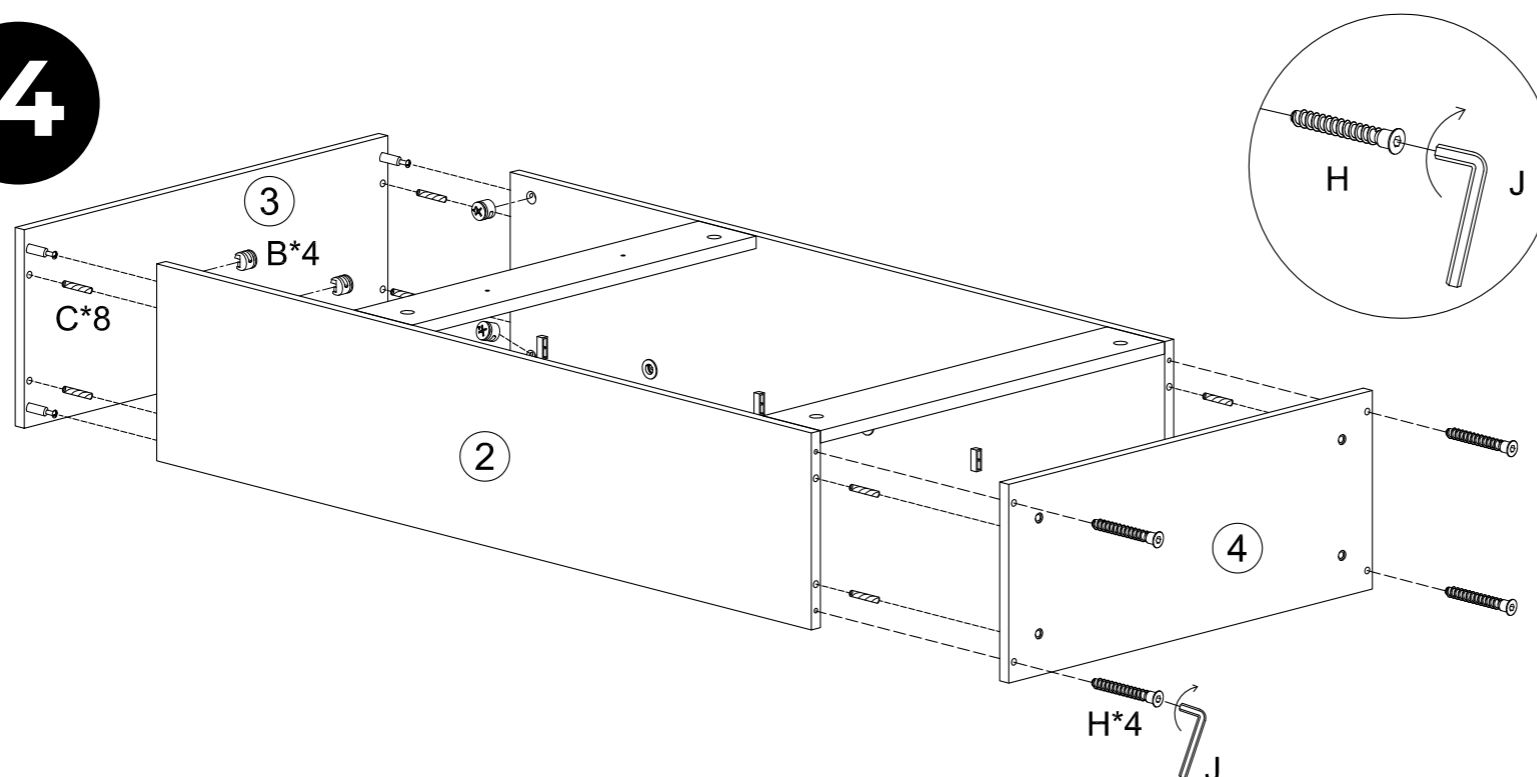
**3**





B	x4
	
Ø15mm	


C	x8
	
Ø8*30mm	


**4**



B	x4
	
Ø15mm	

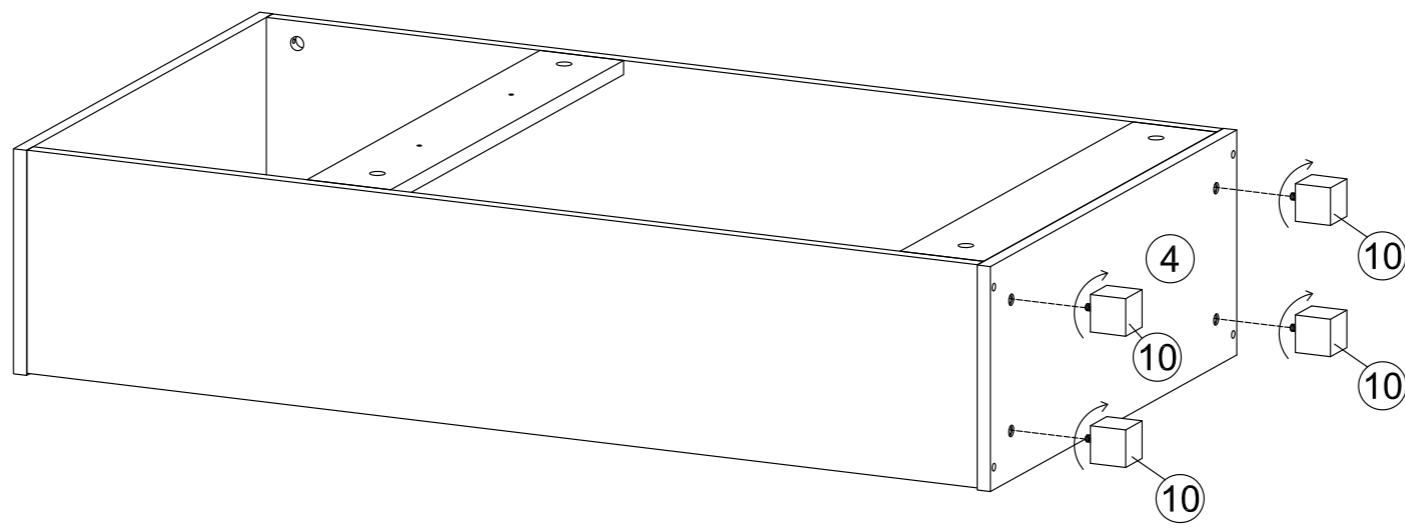
C	x8
	
Ø8*30mm	

H	x4
	
7*48mm	

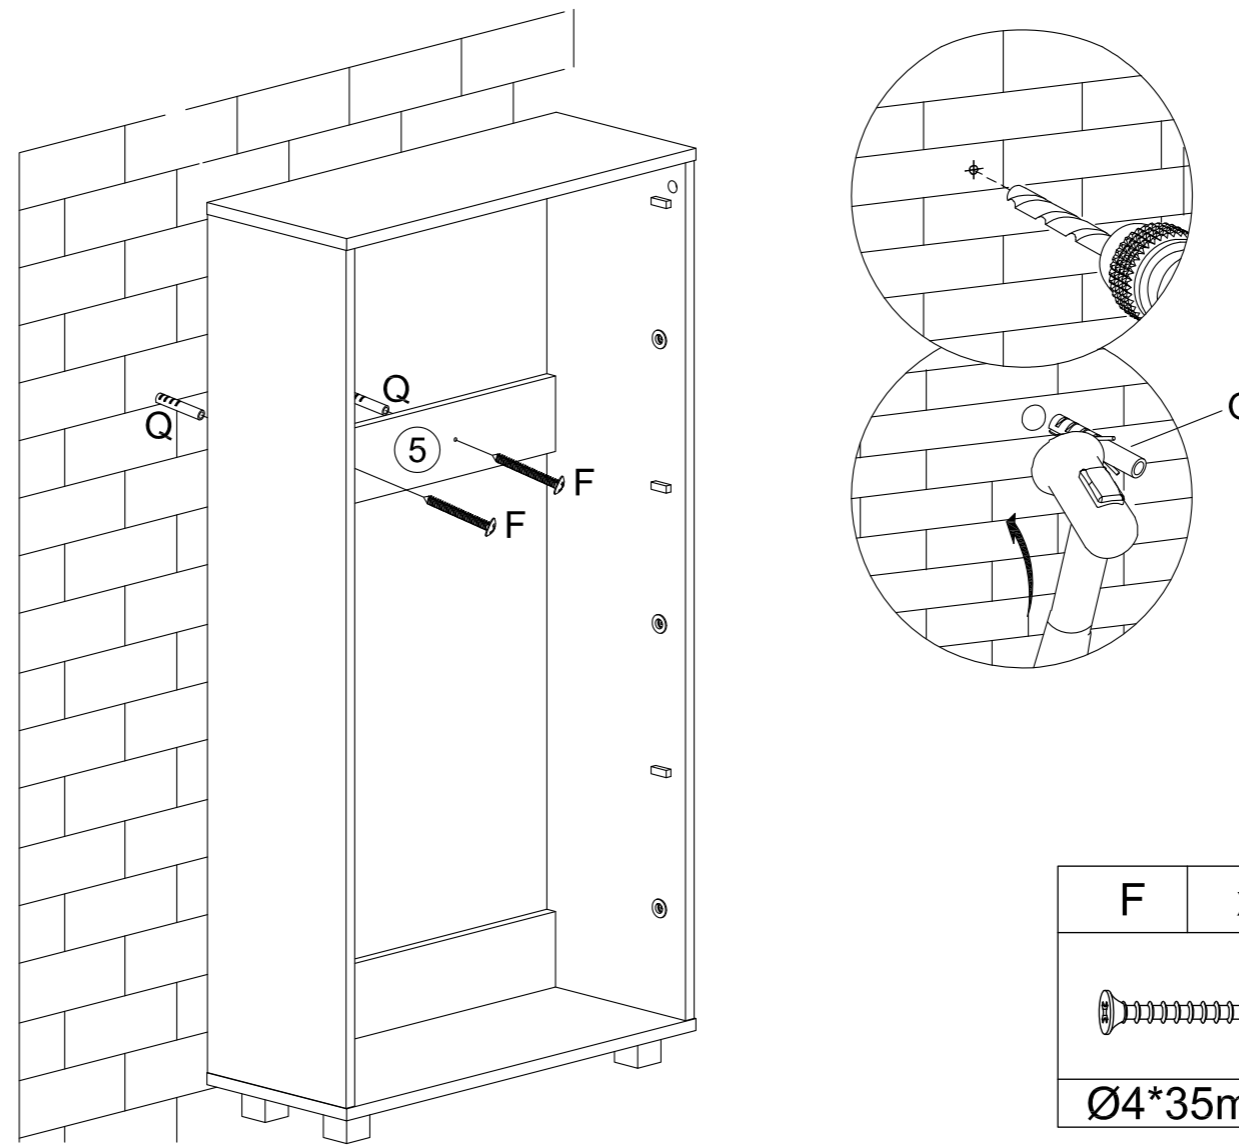
J	x1
	
M4	


# Zapatero 3 Cajones Holty


**5**



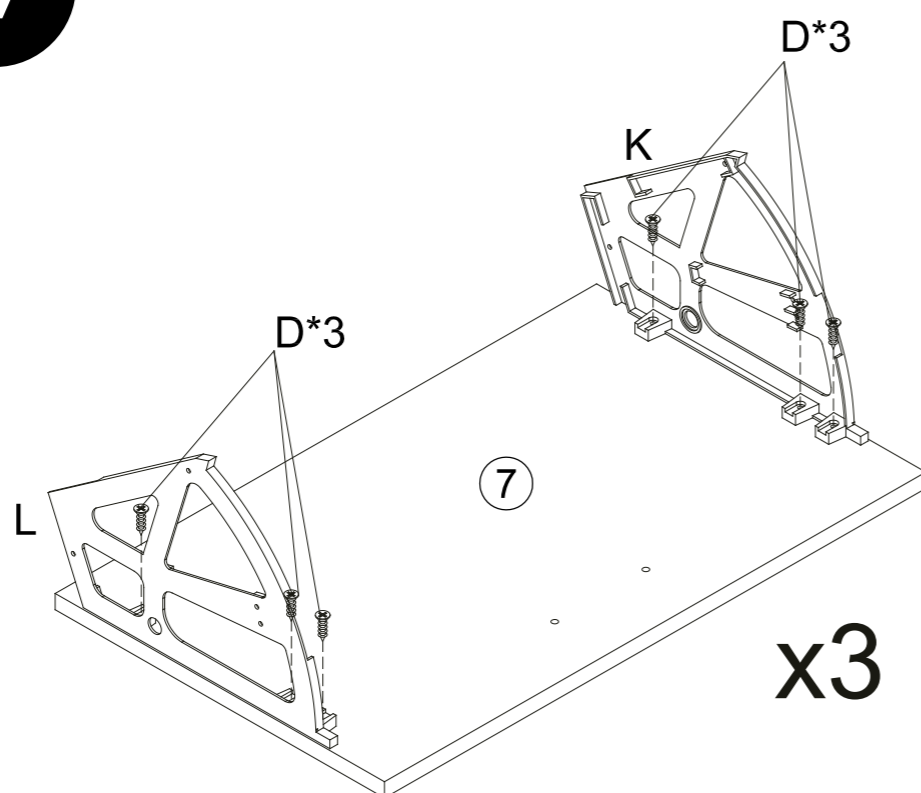
**6**





F	x2
	
Ø4*35mm	


Q	x2
	

**7**

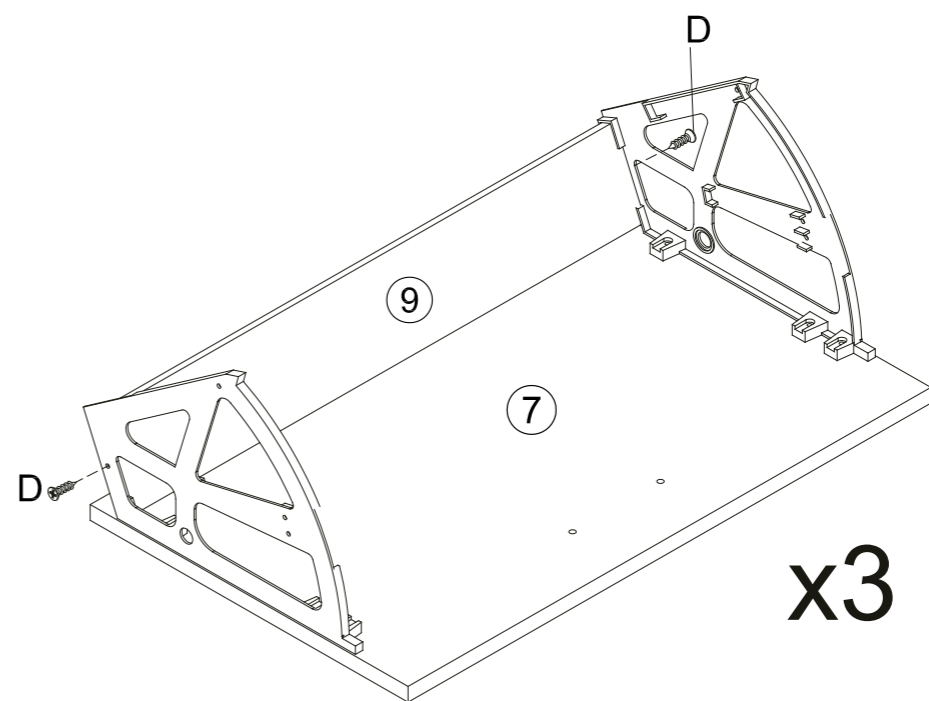



D	x18
	
Ø3.5*14mm	

K	x3
	

L	x3
	

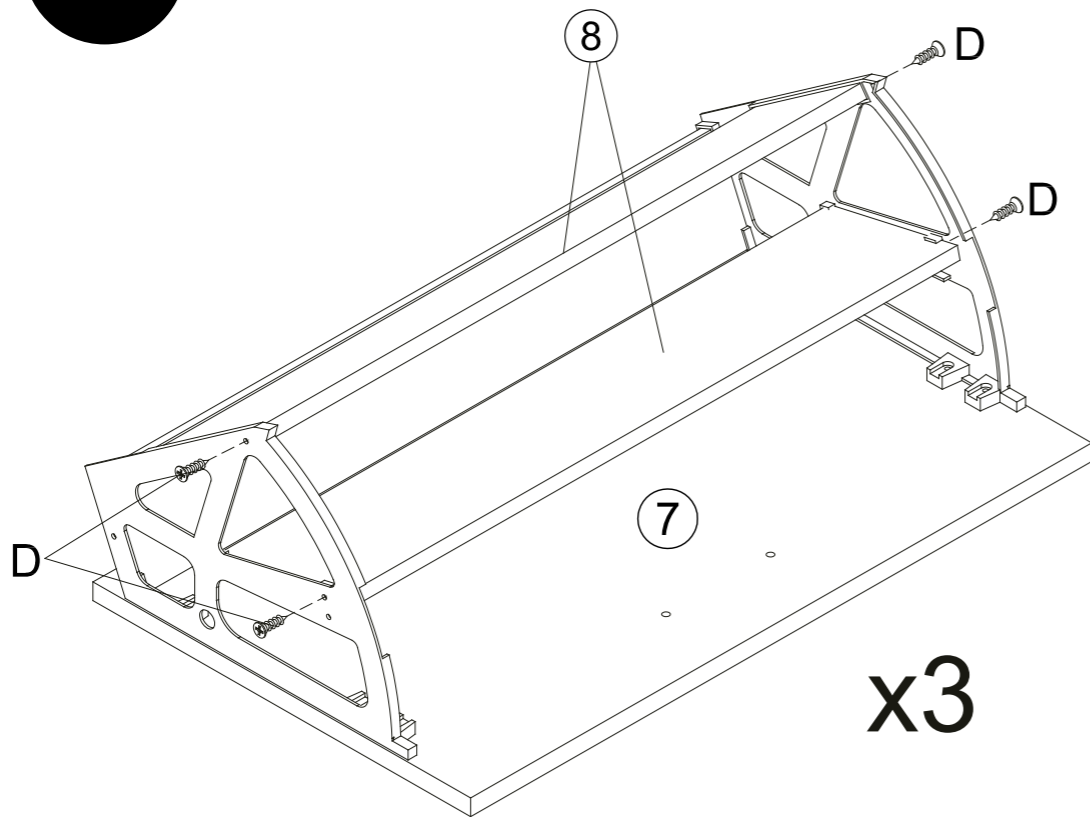
**8**




D	x6
	
Ø3.5*14mm	

# Zapatero 3 Cajones Holty

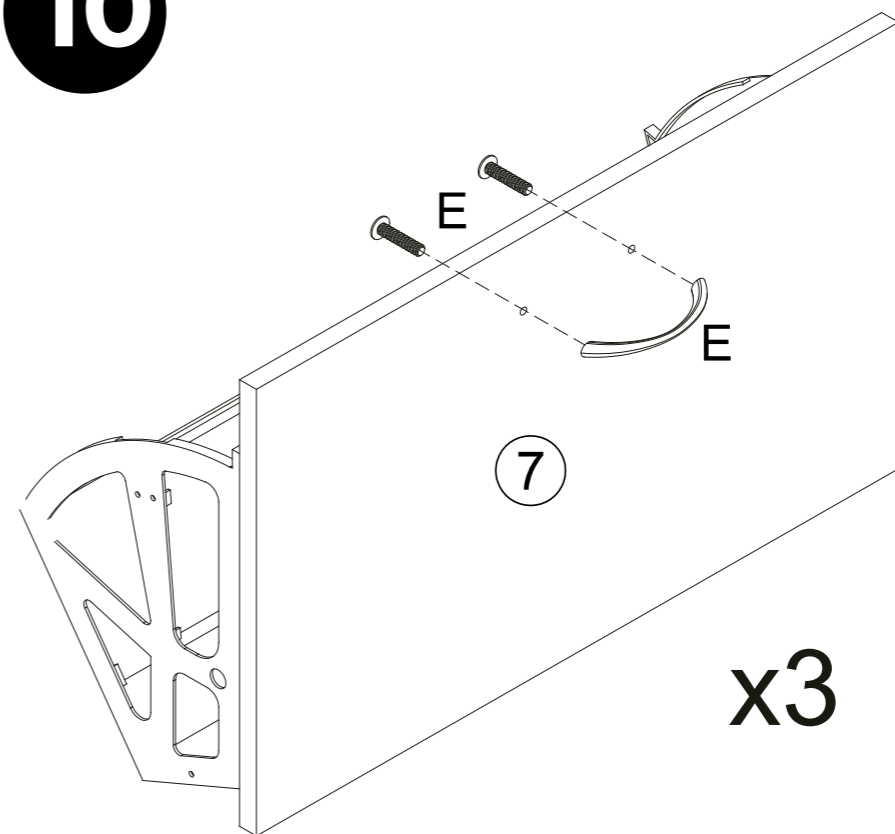
9




x3

D	x12
	
Ø3.5*14mm	

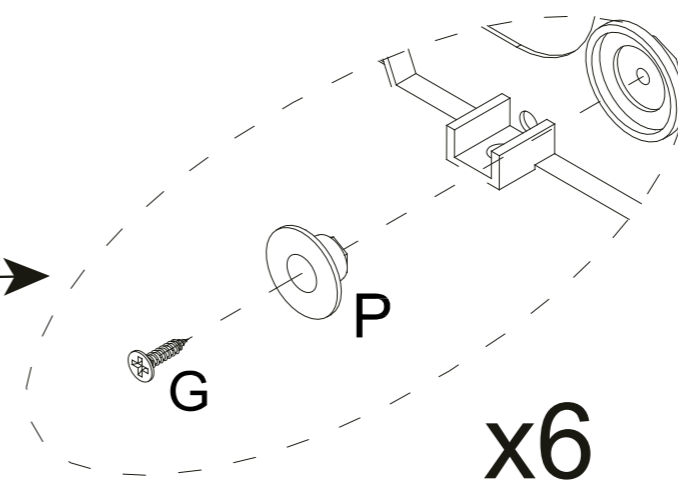
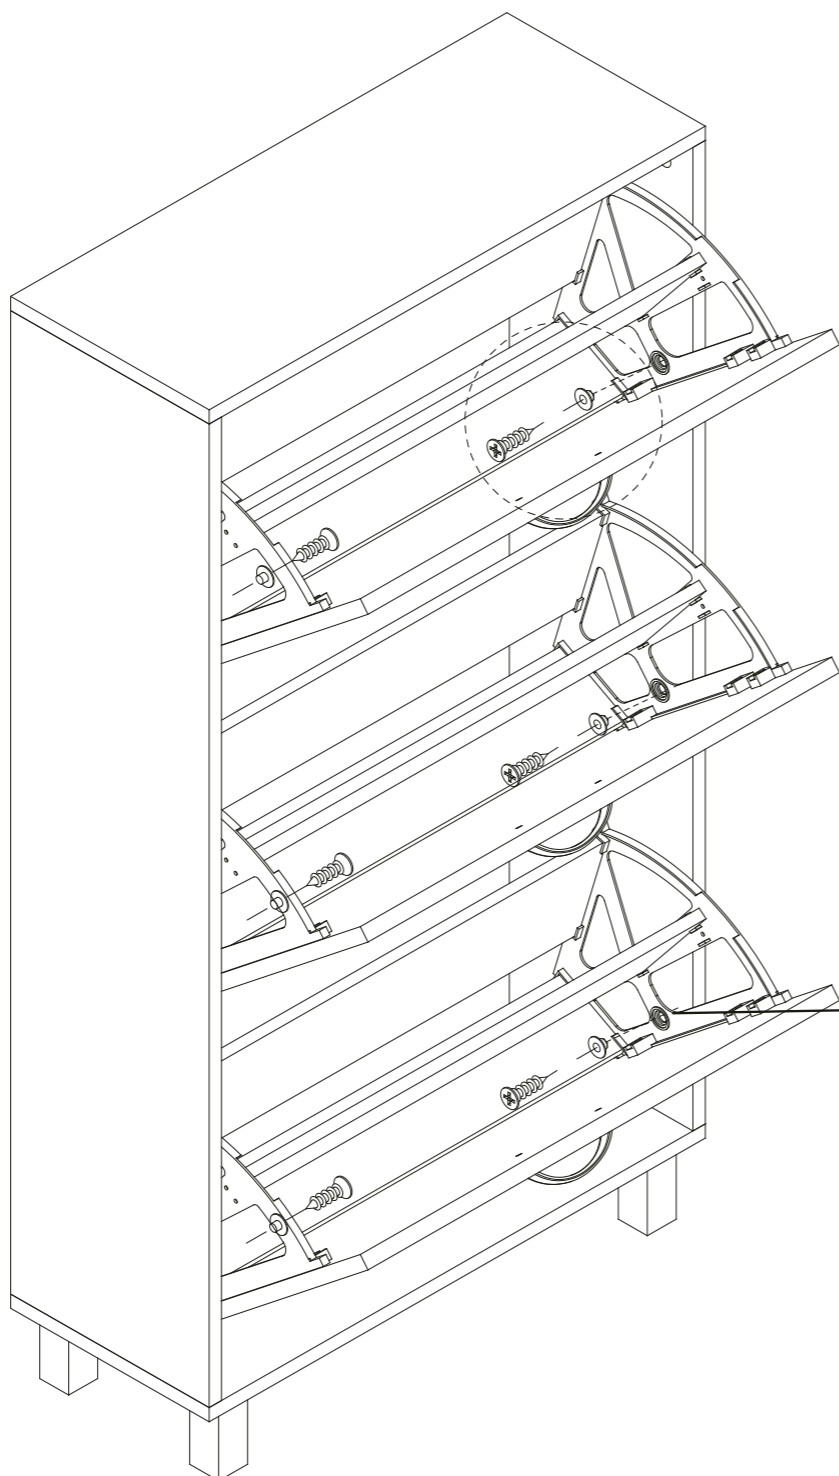
10





x3

E	x3
	

11



x6

G	x6	P	x6
			
Ø4*12mm			